


How to Install Your Hanging Hardware Kit



Step 1: The packet containing your hanging hardware can be found attached to the back of your purchased frame. In the event that it separates from the frame during delivery, just check the bottom of the shipping box. Unpack D-rings, Wire, and Screws from the packet. (The additional hook and nail will be installed on the wall when you are ready to hang your frame.)

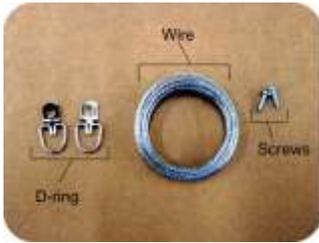

Step 2: Determine whether your frame will be hung horizontally or vertically. On the back of frame measure down approximately 1/3 the distance from the top of the frame on both the left and right sides. This is where your D-rings will be installed during Step 3.



Step 3: The D-rings should be installed using the screws provided. An electric / battery powered screw driver or drill is strongly suggested. The D-rings should be installed so the flat portion is on the frame and the ring is hanging over the backing of the frame. This step is repeated for both the left and right sides of the frame. DO NOT attempt to install D-rings on the cardboard backing of the frame.



Step 4: With a D-rings installed on both the left and right sides of the frame, loop the wire through one D-ring as shown.



Step 5: Twist the wire around itself several times, as shown. To ensure secure hanging, loop a portion of the wire back through itself. Use caution when handling the wire so as not to poke yourself on the wire ends.



Step 6: Stretch the wire to the other side of the frame and run it through the D-ring, allowing a bit of slack, and cut the wire approximately 6 inches past the frame. Then, repeat Step 5 for this side of the frame.

That's it! Please contact us if you have any questions.